

OPERATING INSTRUCTIONS

Controls and Their Functions

LIGHT/WARMER SWITCH


This switch heats the bottom of the corn pan and turns on the light.

KETTLE MOTOR SWITCH

This switch turns on the motor which drives the kettle agitator shaft.

KETTLE HEAT SWITCH

This switch turns on the heat element inside the popcorn kettle.

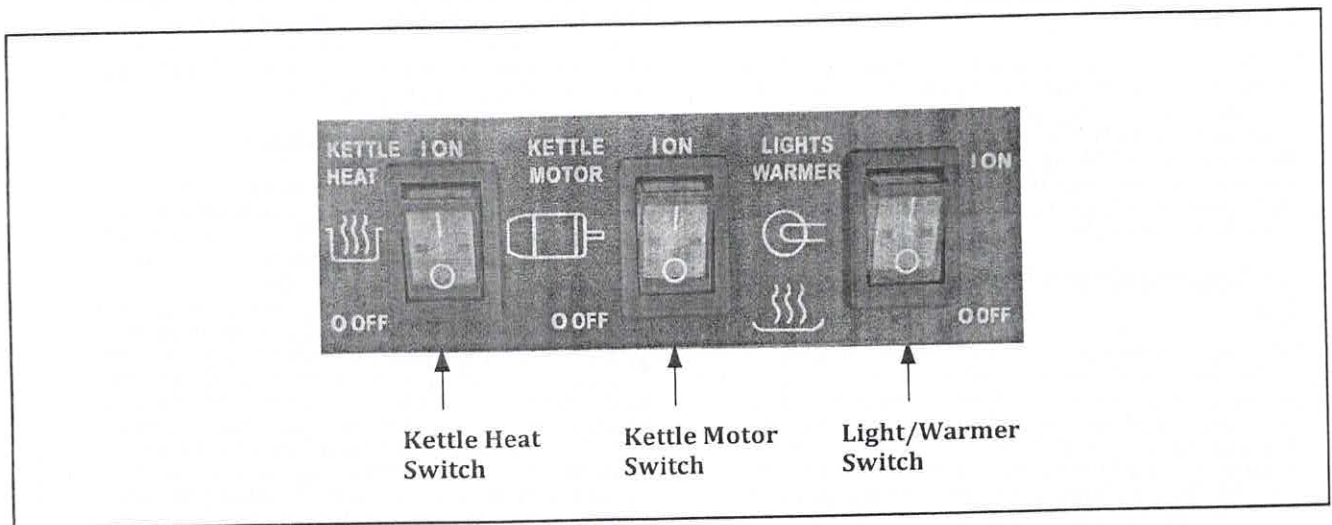

Amount of Popcorn and Oil

Your new popper is equipped with a corn measure cup. Popcorn popped in coconut oil stays fresher longer. Coconut oil does not leave black deposits in your kettle like other oils.

Corn charge: 8 oz.
Oil charge: 2.6 oz.
Flavacol: 1 tablespoon

4 Oz. Accessory Pack

Part No. 2071NM: Scoop
Part No. 47147: One Cup Measure
Part No. 47678: Flavacol Measure 6.5cc
Part No. 47150: Oil Measure (1/3 Cup)

Popcorn Cleaning Instructions

CARE AND CLEANING

1. Each time you finish a series of popping, wipe the outside of the kettle with a soft cloth to remove any oil drippings on the outside of the kettle. CAUTION: The hot kettle will cause burns if you touch it with your hand. Allow the kettle to cool for at least 1 hour before attempting to clean.
2. Unplug kettle and remove it from the machine.
3. With a cloth, wipe out the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle. DO NOT place the kettle in water. This will cause damage to the electrical components and will void your warranty.
4. Take a clean cloth and wipe excess grease from the glass. Wipe the outside of the machine also. NOTE: DO NOT USE ANYTHING ELSE OTHER THEN WATER
5. With a wet wash cloth wipe down inside and outside of machine.

NOTE: THERE WILL BE A \$25 CLEANING CHARGE FOR ALL CONCESSIONS THAT ARE NOT CLEANED.